


SAMPLES OF SOME TRANSDUCERS

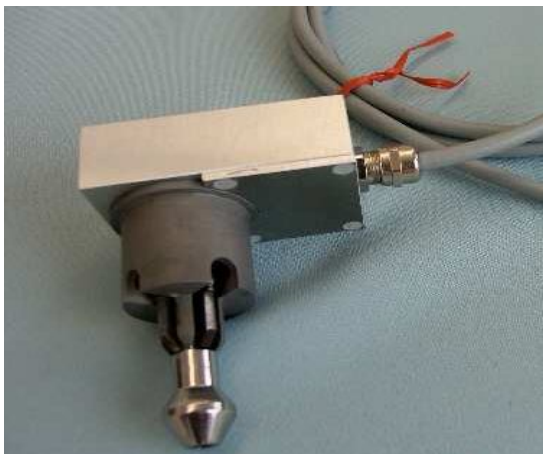

F098 – Force sensor



L024 - Rope tension sensor




TQ051 – Calibrator torque



TQ045 – Torque sensor



C033 – Bending beam

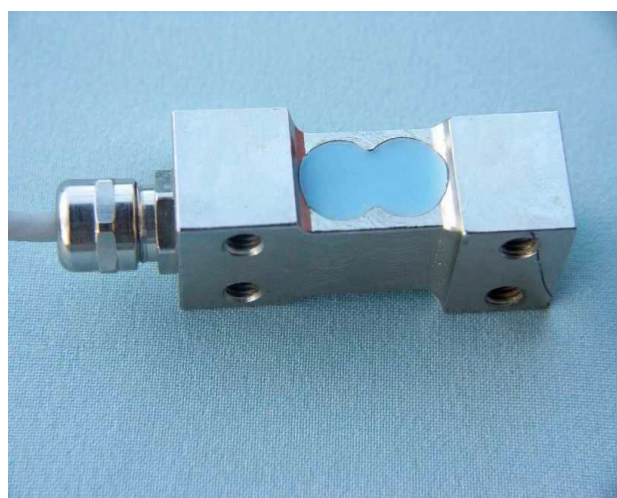

F062 – Bending beam



M016 – Tensile sensor



M014 – Tensile sensor



F139 – Sensor membrane stress



F140 – Pressure sensor



F135, F136 – Adjustable pressure sensor



C020 – Pressure sensor